



iHome iM71SC Spring Replacement

This guide will instruct you in replacing the internal spring of iHome iM71SC portable speaker.

Written By: Sarah Brown



INTRODUCTION

 
This guide will instruct you in replacing the internal spring of the speaker.



TOOLS:

- [Philips Head Screwdriver: Sized PH000](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Large Needle Nose Pliers](#) (1)
-

Step 1 — iHome iM71SC Disassembly

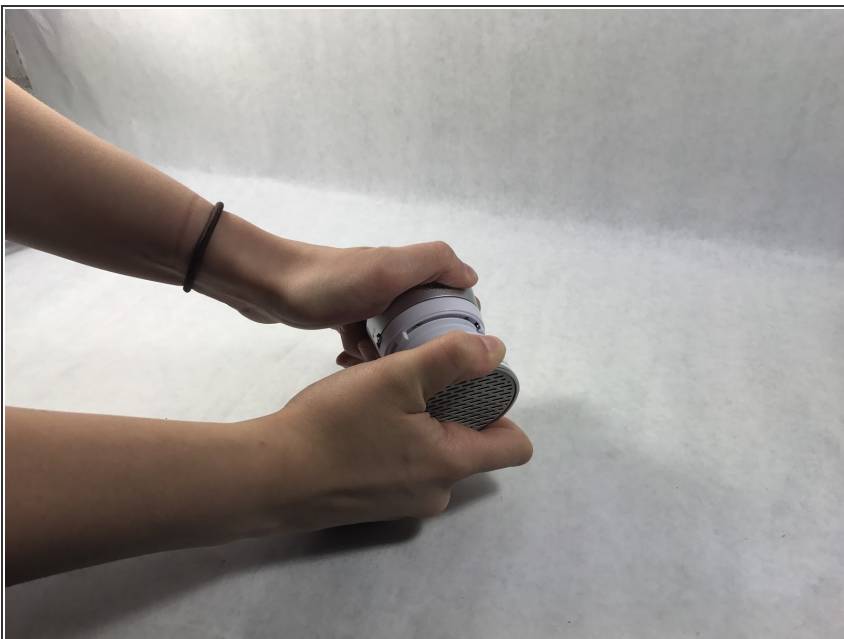

- Push down and turn the top of the speaker clockwise. This will release the clips and expand the speaker.

Step 2



- Use a #000 Phillips screwdriver to remove the four 1 mm screws from the bottom half of the speaker.

Step 3



- Flip the speaker over and use a #000 Phillips screwdriver to remove three 1mm screws . Unscrew these to unfasten the top.

Step 4



 
- Remove the now unfastened coverings to expose the internals of the speaker.

Step 5 — Spring



- Pry the spring from the speaker housing using the blue plastic pry tool.

Step 6

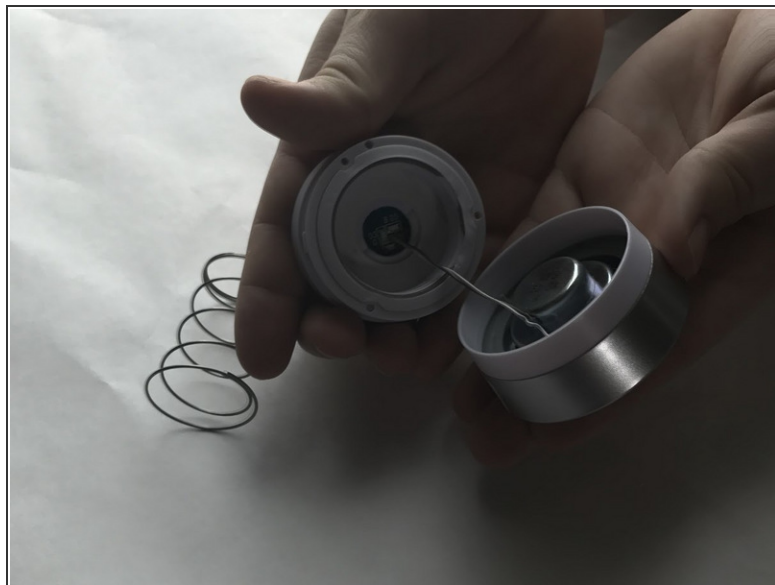

- Unwind the old spring from the wires.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 01:12:45 PM.

